

Author: Julian Lockwood (julian@x-plane.com)

Copyright: Laminar Research 2017

Disclaimer

The information contained in this document is for **simulation use only**, within the X-Plane flight simulator. This document is not subject to revision, and has not been checked for accuracy. This document is intended for entertainment only, and may not to be used in situations involving real-life aircraft, or real-life aviation.

Distribution

This document may be copied and distributed by Laminar Research customers and developers, for entertainment. It may also be distributed with third-party content developed for X-Plane.

The Garmin 430	4
The X-Plane 430	5
The "Pop-Up" X430	5
Invoking, moving, sizing, and closing the "Pop-Up" X430	6
X430 Controls	9
COM / VLOC Rotary Control	11
GPS Rotary Control	11
Setting the COM Frequency	12
Setting the NAV Frequency	13
Enabling and Squelching the NAV Morse Code Identifier	14
"Nav" Page Group	15
Shortcut to the Nav Page Group	15
The Active Page	15
Default Nav Page	16
Map Page	16
VNAV Page	16
Programming a VNAV Scenario	17
Flying a VNAV Scenario	17
"Waypoint" Page Group	
Shortcut to the Waypoint Page Group	
The Active Page	
Airport Location Page	19
Airport Runway Page	19
Airport Frequency Page	19
Airport Approach Page	20
Airport Arrival Page	20
Airport Departure Page	21
"Nearest" Page Group	22
Shortcut to the Nearest Page Group	22
The Active Page	22
Nearest Airport Page	23
Nearest Intersection Page	23
Nearest NDB Page	24

Nearest VOR Page	24
Nearest Airspace Page	25
"Flight Plan" Page Group	26
Shortcut to the Flight Plan Page Group	26
The Active Page	26
Active Flight Plan Page	27
Flight Plan Catalog Page	27
Programming a Flight Plan	
Initializing the X430 / Deleting a previous Flight Plan	
The Initial Waypoint	29
Activating the Cursor	29
Inserting Waypoints	
Deleting Waypoints	
Selecting a Standard Instrument Departure (SID)	
Selecting a Standard Terminal Arrival (STAR)	
Selecting an Approach	
Direct To (a waypoint)	
Activating a Leg	
Activating an Approach	40
Activating Vectors to Final	41
Loading a (saved) Flight Plan	
The OBS Function	43
SUSPEND (SUSP) Mode	45
Messages	46
Autopilot Operations	47

The Garmin 430



The Garmin 430 is an advanced panel-mounted IFR navigation and communication system that has proven extremely popular with General Aviation pilots.

The G430 was revolutionary when it was first launched in 1998, and provided General Aviation pilots with a color moving map for the first time, the ability to input a flight plan, and featured built-in comm and nav radios. The G430 was followed by the G530, which built on those capabilities, and included a larger moving map display.

Both the G430 and G530 models have been discontinued by Garmin, but are still widely used and available.

Garmin 430 Specifications:

- \checkmark Physical dimensions - 6.25'W x 11.00'D x 2.65'H (159 mm x 279 mm x 67 mm)
- Weight 6.6 lb. (3.0 kg.) \checkmark
- √ Display type - 8 color TFT LCD
- Display size -4.0"W x 2.1"H (10.2 x 5.3 cm) Display resolution 240 x 128 pixels
- \checkmark
- ✓ Transmit power - 10 Watts
- \checkmark Built-in VHF Comm with 8.33/25 kHz channel spacing
- Built-in VOR/Localizer/Glideslope, ICAO annex 10 FM compliant \checkmark
- ✓ Max Waypoints/favorites/locations - 1,000
- \checkmark Navigation database coverage area - Americas, International / Worldwide
- \checkmark Preloaded Terrain database
- Preloaded Obstacle database
- Flight plans 20 reversible; up to 31 waypoints each √
- \checkmark Front-loading data cards (for convenient database updates)
- 1 Class B Terrain Awareness and Warning System (TAWS) alert-compatible

The X-Plane 430

The Laminar Research / X-Plane G430 system will be referred to here as the X430. This has been developed by our team to resemble the Garmin 430, both in appearance and function. However, the capability and operation of this device in the simulator may differ in some areas to the real product.

The X430 is featured in several of the aircraft bundled with X-Plane. Additionally, as a corecomponent of the simulator, it can be 'dropped' into any third-party aircraft, and used immediately.

The device is modeled in 3D within the aircraft cockpit. However, a 2D 'pop-up' (seen right) is also available for convenience.



The "Pop-Up" X430

For convenience, a pop-up X430 is provided in every X-Plane default aircraft that features the device. This is a 2D panel that can be moved and sized per the needs of the pilot. For the purposes of this guide, only the pop-up X430 will be featured. However, commands may also be input using the X430 panel built into the 3D cockpit.

Invoking, moving, sizing, and closing the "Pop-Up" X430

Invoking the pop-up X430

To invoke the pop-up X430 panel, position and click the mouse-pointer anywhere inside the **DISPLAY** area of the X430 panel in the 3D cockpit.



Moving the pop-up X430



To move the pop-up X430 panel to the desired location on your computer screen, first place the mouse-pointer anywhere on the outer-frame. The top-center is recommended, as shown here by the white arrow.

Now click and drag the pop-up X430 panel to the desired location on your computer screen.

Re-sizing the pop-up X430

Place the mousepointer at the topcenter of the X430 frame. Two click-spots will appear.

The click-spot in the **UPPER-RIGHT** of the X430 frame invokes "Window" mode.









In this mode, the X430 panel can be re-sized by dragging the window frame - in the same manner as any other window supported by your operating system.

Alternatively, you may re-size the window by simply dragging the edge of the frame, when the Windows "Hand" pointer is displayed.

Closing the pop-up X430

Place the mousepointer at the topcenter of the X430 frame. Two click-spots will appear.

The (red) click-spot in the **UPPER-LEFT** of the X430 frame closes the pop-up.



.C.	COM 2 121,900		🔶		
	121.800	2.0	8.	2.0	-D+ MENL
VOL/10	VLOC 2	DIS	ртк	BRG	CLR ENT
сом/н ос	111.70	– –	071.0		DEFAULT GP
VLOC	ENR	0.0	U71 °		Element
PUSH C/V	VLOC	US M			PUSH CRSR

X430 Controls

This section identifies the control features of the X430. Where relevant, these are discussed in more detail later in the guide.



1	Comm Volume & Squelch	NOT ACTIVE IN X-PLANE as of XP 11.00
2	Comm Frequency Flip-Flop Key	Used to swap the active and stand-by comm radio frequency.
3	VLOC (VOR / Localizer) ID Volume & Squelch	Toggle-switch used to enable or squelch the VLOC (VOR / Localizer) Morse-code identifier volume.
4	VLOC (VOR / Localizer) Frequency Flip-Flop Key	Used to swap the active and stand-by VLOC (VOR / Localizer) frequency.
5	Comm / VLOC <u>Outer</u> Rotary Control	Adjusts the selected stand-by frequency (numeric portion) up or down. Click the rotary at the 3 O'clock position to adjust up, and the 9 O'clock position to adjust down.

6	Comm / VLOC Inner Rotary Control Center (Push Button)	Toggles between stand-by comm radio frequency and stand-by VLOC (VOR / Localizer) frequency
7	Comm / VLOC Inner Rotary Control	Adjusts the selected stand-by frequency (decimal portion) up or down. Click the rotary at the 3 O'clock position to adjust up, and the 9 O'clock position to adjust down.
8	Course Deviation Indicator (CDI) button	Toggles between the VOR/Localizer and GPS as the active navigation device. This applies to X430 unit, and the connected aircraft instrumentation / auto-pilot. In VLOC mode, the aircraft navigation instruments, and autopilot, will reference the selected radio navigation aid(s) (e.g. VOR or ILS localizer). In GPS mode, the aircraft navigation instruments, and autopilot, will reference the X430.
9	Omni Bearing Selector (OBS) button	Provides the pilot with the capability to select a 'radial' bearing to or from the active waypoint.
10	Message (MSG) button	Used to view systems messages and alerts.
11	Flight Plan (FPL) button	Used to create, edit, and activate flight plans.
12	Procedures (PROC) button	Used to select departure and arrival procedures for your flight plan.
13	GPS Inner Rotary Control	Multi-function control, depending on the selected mode.
14	GPS Inner Rotary Control Center (Cursor Button)	Multi-function control, depending on the selected mode.
15	GPS <u>Outer</u> Rotary Control	Multi-function control, depending on the selected mode.
16	Clear (CLR) button	Used to erase an entry, or cancel a command.
17	Enter (ENT) button	Used to approve an operation, complete a data entry, or move to the next data field.
18	MENU button	Displays a context-sensitive menu of operations.
19	Range (RNG) button (up or down)	Fly direct to a designated waypoint.
20	Direct To button	Selects the desired map scale.

COM / VLOC Rotary Control



GPS Rotary Control



Setting the COM Frequency

Important

The X430 features built-in comm and nav radios. In X-Plane default aircraft, this unit is **usually** assigned the COM2 and NAV2 designations. However, this **may** not be the case in your aircraft.



Click the CENTER of the Comm / VOR Localizer Rotary to highlight the standby COM frequency.

Click (or mouse-wheel-roll) the Comm Outer Rotary at the 9 O'clock position to decrement the COM frequency - numeric portion.

Click (or mouse-wheel-roll) the Comm Outer Rotary at the 3 O'clock position to increment the COM frequency - numeric portion.

Click (or mouse-wheel-roll) the Comm Inner Rotary at the 9 O'clock position to decrement the COM frequency - decimal portion.

Click (or mouse-wheel-roll) the Comm Inner Rotary at the 3 O'clock position the decrement the COM frequency - decimal portion.



Click the Comm Frequency Flip-Flop Key to swap the standby and active COM frequency.

Note: Click and hold the Comm Frequency Flip-Flop Key for the emergency frequency.

Setting the NAV Frequency

Important

The X430 features built-in comm and nav radios. In X-Plane default aircraft, this unit is **usually** assigned the COM2 and NAV2 designations. However, this **may** not be the case in your aircraft.

The X430 features built-in comm and nav radios. In X-Plane default aircraft, this unit is usually assigned the COM2 and NAV2 designations.



Click the CENTER of the Comm / VOR Localizer Rotary to highlight the standby NAV frequency.

Click (or mouse-wheel-roll) the Comm Outer Rotary at the 9 O'clock position to decrement the NAV frequency - numeric portion.

Click (or mouse-wheel-roll) the Comm Outer Rotary at the 3 O'clock position to increment the NAV frequency - numeric portion.

Click (or mouse-wheel-roll) the Comm Inner Rotary at the 9 O'clock position to decrement the NAV frequency - decimal portion.

Click (or mouse-wheel-roll) the Comm Inner Rotary at the 3 O'clock position to decrement the NAV frequency - decimal portion.



Click the VLOC (VOR / Localizer) Frequency Flip-Flop Key to swap the standby and active NAV frequency.

Enabling and Squelching the NAV Morse Code Identifier

Important

The X430 features built-in comm and nav radios. In X-Plane default aircraft, this unit is **usually** assigned the COM2 and NAV2 designations. However, this **may** not be the case in your aircraft.



When the NAV frequency is tuned to a navigation aid that is within range, an audible Morse-Code identifier is available, to confirm the correct tuning.

Click the VLOC (VOR / Localizer) ID Volume & Squelch button to toggle the audible Morse-Code identifier on, or off.

Note: When selecting the squelch while the Morse-Code is playing, the squelch will not take effect until the Morse has completed.

Hint: If you do not hear the Morse-Code identifier, check your X-Plane Sound Settings, and the aircraft's audio panel selection.

"Nav" Page Group

This is a group of three pages that collectively provide positional awareness to the pilot, via a plan view of the route and flight plan (if any). A VNAV flight profile may also be input here.

Shortcut to the Nav Page Group



To quickly go to the Navigation Page Group:

Click and HOLD the CLR button.

The Active Page



The X430 has three Nav Pages. These are:

- 1. Default Nav Page.
- 2. Map Page.
- 3. VNAV Page.

The Active Page is indicated by the bardisplay at the lower right of the main display.

Use the GPS Inner Rotary to switch between the individual Nav Pages.

Default Nav Page



KSMD

MSG NAV

MSG

HRCP

KTOA

FPL

Map Page

X-PLANE 430

.C

VOL/PUBH

.V

VOL/PUSH

PUSH C/V C ↓

Y

CDI

COM/VLOC

A

35nm

OBS

This Page features a graphic course deviation indicator (CDI) across the top of the display. This informs the pilot if the aircraft is steering left or right of the desired course, and the degree of correction required.

Also displayed is the next waypoint identifier, together with the distance, the desired track (DTK), the (actual) bearing (BRG) to the waypoint, the ground speed (GS), current track (TRK) and estimate time en-route (ETE).

This Page displays a plan view of your location, together with local waypoints and airspace boundaries.

Your aircraft is fixed at the center of the Page, oriented towards the direction of travel.

In the example to the left, the course currently being flown is 074 degrees.

The magenta line represents the desired track (DTK).

The map may be displayed with north up, or track-up (by pressing the MENU key).

VNAV Page



The Vertical Navigation (VNAV) Page provides the capability to designate a target altitude for a <u>single</u> waypoint in your flight plan. This feature is only active during the execution of a flight plan, or a "Direct To" instruction. As you approach the designated

waypoint, the VSR and STATUS data fields on the VNAV Page will provide guidance to ensure the target altitude is achieved.

Note: The X430 VNAV system is entirely passive, and does not interface with the autopilot to provide climb or descent instructions. It is the duty of the pilot to execute the climb, or descent, according to the recommendations made by the X430.

-

CLR

TAULT

MENU

ENT

GPS

PUSH

KEMT

KLGRSLT

PROC

Programming a VNAV Scenario

Let's consider a scenario whereby, at the end of a flight to KSFO San Francisco International, the pilot wishes to descend at a rate of 500 feet per minute to a pattern altitude of 1,000 MSL, three miles before arrival.



Programming the VNAV Page:

Click the CENTER of the GPS Rotary to activate the cursor. This will initially appear in the TARGET ALTITUDE box.

Click the GPS Outer Rotary to move forward or backwards, to the desired data field.

Within the desired data field, click the GPS Inner Rotary at the 9'Oclick and 3'Oclock positions, to increment and decrement the value respectively.

Note: The target position may only comprise a waypoint in your flight plan.

The example to the left shows the completed VNAV Page for this specific scenario.

Flying a VNAV Scenario

X-PLANE 430		and the state of the second state		
	COM 2	VERTICAL	NAVIGATION	
VOL/PUBH	121.300	TARGET ALTITU	DE	-P+ MENU
V V	122.790	1000ft	MSL	
NOLIPUSH Y	VLOC 2	TARGET POSITI	ON	CLR ENT
	113.60	3.0nm Beto	re KSFU	
COMVLOC	115.10	VS PROFILE	VSR	NAV GPS
Econo 1	ENR	JUUT/M	-7521/m	Elendo ?
C/V	VLOC	MSG		CRSR
0	CDI	OBS MSG	FPL PROC	a second

VSR and STATUS Instructions

In the example to the left, the flight is underway, and we are approaching KSFO.

The pilot has left his descent a little late, and therefore a rate of more than the desired 500 feet per minute is now required.

The VSR (Vertical Speed Required) and STATUS data fields are highlighted in yellow. The pilot has been instructed to "Descend to target" at a rate of -752 feet per minute.

If the pilot follows these instructions, the aircraft will arrive at the pattern altitude of 1,000 MSL at precisely 3 nautical miles from the field.

"Waypoint" Page Group

This is a group of three pages that collectively display information about the origin and destination airports.

Shortcut to the Waypoint Page Group



To quickly go to the Waypoint Page Group: Click and <u>HOLD</u> the <u>CLR</u> button

Then...

Click the GPS Outer Rotary at the 3 O'clock position.

The Active Page



The X430 has six Waypoint Pages. These are:

- 1. Airport Location Page. This is the default Page.
- 2. Airport Runway Page.
- 3. Airport Frequency Page.
- 4. Airport Approach Page.
- 5. Airport Arrival Page.
- 6. Airport Departure Page.

Use the GPS Inner Rotary to switch between the individual Waypoint Pages.

Airport Location Page



This Page displays basic information about the destination airport, (or current airport where no destination is specified).

Information displayed includes name, latitude/longitude, and elevation.

Airport Runway Page



Airport Frequency Page

X-PLANE 430 ∇ RNG \triangle .C APT KSF0 ç 121.300 VOL/PURM 118.05 AWOS -D+ MENU 122.790 CTAF 122.95 .V VL0C 2 DEL 118.2 CLR ENT VOL/PUSH 113.60 GND 121.8 DEFAULT COM/VLOC 115.10 GND 128.65 GPS TERM 120.5 TWR PUSH C/V PUSH GPS MSG WPT CDI OBS MSG FPL PROC

This Page displays a plan view of the runways at the destination airport, (or current airport where no destination is specified), and basic information about each one.

To select the desired runway:

Click the CENTER of the GPS Inner Rotary to activate the cursor.

Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to cycle through the available runways.

This Page displays the frequencies associated with the destination airport, (or current airport where no destination is specified).

AWOS = Automated Weather Observation System

CTAF = Common Traffic Advisory Frequency

DEL = Clearance Delivery Frequency

- GND = Ground ATC Frequency
- TWR = Tower ATC Frequency
- **DEP** = Departure ATC Frequency
- APP = Approach ATC Frequency
- CTR = Center ATC Frequency

Airport Approach Page



This Page displays supports the selection of the desired runway approach for the destination airport.

Click the CENTER of the GPS Inner Rotary to display a list of available approaches for the destination airport.

Click the GPS Inner Rotary at the 3 O'clock and 9'oclock positions to select the desired approach.

Click the ENT (Enter) button to complete the selection.



Note: You will have to additionally select (ATC) vectors to the desired approach, or a specific initial approach fix waypoint. Use the same method to make the selection.

Airport Arrival Page





This Page displays supports the selection of the desired STAR (Standard Arrival) procedure for the destination airport.

Click the CENTER of the GPS Inner Rotary to display a list of available STARs for the destination airport.

Click the GPS Inner Rotary at the 3 O'clock and 9'oclock positions to select the desired STAR.

Click the ENT (Enter) button to complete the selection.

Note: You will have to additionally select the desired transition waypoint and runway for your chosen STAR. Use the same method to make these selections.

20

Airport Departure Page



This Page displays supports the selection of the desired SID (Standard Instrument Departure) procedure for the airport of origin.

Click the CENTER of the GPS Inner Rotary to display a list of available SIDs for the airport of origin.

Click the GPS Inner Rotary at the 3 O'clock and 9'oclock positions to select the desired SID.

Click the ENT (Enter) button to complete the selection.



Note: You will have to additionally select the desired runway...



... and transition waypoint for your chosen SID.

Use the same method to make these selections.

"Nearest" Page Group

Shortcut to the Nearest Page Group



To quickly go to the Nearest Page Group:

Click and HOLD the CLR button

Then...

Click the GPS Outer Rotary at the 3 O'clock position TWICE.

The Active Page



The X430 has five Nearest Pages. These are:

- 1. Nearest Airport Page. This is the default Page.
- 2. Nearest Intersection Page.
- 3. Nearest NDB Page.
- 4. Nearest VOR Page.
- 5. Nearest Airspace.

Use the GPS Inner Rotary to switch between the individual Waypoint Pages.

Nearest Airport Page



Nearest Intersection Page

X-PLANE 430					
C C	COM 2	NEARES		DTS	
	122.790	HIIPR	246	1.5	-D+ MENU
	VLOC 2	DOCKR	251	1.6	CLR ENT
	113.60	DLREY	269	2.3	
COM	115.10	FABRA	272	2.4	DEFAULT GPS
Forman VLOC	ENR	ARBIE	051	2.6	E and
PUSH C/V	VLOC	M	SG NRST	00	PUSH CRSR
0	CDI	OBS N	ISG FPL	PROC	

This Page displays the nearest airport to your current location, together with the direct heading (bearing) to that airport, the distance, the available approach-type (or VFR) and the length of the longest runway.

To proceed **DIRECT** to any of the airports displayed:

Click the CENTER of the GPS Inner Rotary to activate the cursor.

Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to cycle through the available airports.

Click the "Direct To" button.

Click the ENT (Enter) button to complete the selection.

This Page displays the nearest intersection to your current location. An intersection is a virtual navigation fix, and is usually (but not always) the intersection of two VOR radials.

Also displayed are the direct heading (bearing) to that intersection and the distance.

To proceed **DIRECT** to any of the intersections displayed:

Click the CENTER of the GPS Inner Rotary to activate the cursor.

Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to cycle through the available intersections.

Click the "Direct To" button.

Click the ENT (Enter) button to complete the selection.

Nearest NDB Page

X-PLANE 430	-						
,C C+	COM 2	NDB	NEARE BRG	ST NDE	3 FREQ		
	122.790	PAI	349	19.4	370.0	-0+	MENU
	VLOC 2	LG LG	$\frac{110}{110}$	20.1	233.0 233.0	CLR	ENT
COM/VI OC	115.10	EMT	052	21.4	359.0	DEFAULT	GPS
PIIGH	ENR	GWF	359	49.2	282.0	EE	
Crv	VLOC		MSG	NRST			CRSR
There O	CDI	OBS	MSG	FPL	PROC		~

This Page displays the nearest NDB (Non-Directional Beacon) to your current location, together with the direct heading (bearing) to that NDB, the distance, and the frequency (for manually-tuned ADF devices).

To proceed **DIRECT** to any of the NDBs displayed:

Click the CENTER of the GPS Inner Rotary to activate the cursor.

Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to cycle through the available NDBs.

Click the "Direct To" button.

Click the ENT (Enter) button to complete the selection.

Nearest VOR Page

X-PLANE 430	C. Caller					
	COM 2	VOR	NEARES	ST VOR	FREQ	
	122.790	ICFN	228	0.2 11	1.10	D MENU
	VLOC 2	ILAS	228 227	0.2 11	1.10 9.90	CLR ENT
COMVLOC	115.10	IMKZ	227	0.2 10	9.90	DEFAULT GPS
PUSH	ENR	LAX	244	0.7 11	3.60	PUSH
C/V	VLOC		MSG	NRST DODLD		CRSR
Marsh O .	CDI	OBS	MSG	FPL	PROC	- Canad

This Page displays the nearest VOR to your current location, together with the direct heading (bearing) to that VOR, the distance, and the frequency (for manually-tuned VOR receivers).

To proceed **DIRECT** to any of the VORs displayed:

Click the CENTER of the GPS Inner Rotary to activate the cursor.

Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to cycle through the available VORs.

Click the "Direct To" button.

Click the ENT (Enter) button to complete the selection.

Nearest Airspace Page



This Page displays the nearest controlled, or special-use, airspace to your current location, together with the airspace type.

"Flight Plan" Page Group

Shortcut to the Flight Plan Page Group



To quickly go to the Flight Plan Page Group: Click and <u>HOLD</u> the <u>CLR</u> button Then... Click the FPL button.

The Active Page



The X430 has two Flight Plan Pages. These are:

- 1. Active Flight Plan Page. This is the default Page.
- 2. Flight Plan Catalog Page.

Use the GPS Inner Rotary to switch between the individual Flight Plan Pages.

Active Flight Plan Page



This Page displays the waypoints in the currently active flight plan.

The functions of this page will be described in detail later in the guide.

Flight Plan Catalog Page



This Page displays the catalog of saved flight plans that currently exists in the following folder:

X-Plane > Output > FMS Plans

The functions of this page will be described in detail later in the guide.

Programming a Flight Plan

In this section of the guide, the steps associated with programming a flight plan will be discussed. The sample flight plan used here will be:

KLAX FIXIT3 RZS SERFR ALWYS1 KSFO

Important

Flight plan waypoints and procedures change over time. The sample flight plan used here may no longer be current, and some of these waypoints may not be available for selection during your flight.

Loading a previously-saved flight-plan into the X430 is discussed later in this guide, in the section entitled Loading a (saved) Flight Plan.

Initializing the X430 / Deleting a previous Flight Plan

Before inputting a new flight plan, it's important to initialize the X430 - by deleting any existing flight plan that may be present. To accomplish this:



- Click and HOLD the CLR button until the NAV 1 page is displayed.
- Click the FPL (Flight Plan) button to display the Active Flight Plan page.
- Click the MENU button.
- Click the GPS Inner Rotary at the 3 O'clock position to scrolldown to the "Delete Flight Plan" option.
- Click the ENT (Enter) button to complete the operation.

The Initial Waypoint



Click the FPL (Flight Plan) button to invoke the Flight Plan Page (1 of 2).

By default, your current location will be the initial waypoint in your new Flight Plan.

Activating the Cursor



To create, update or delete waypoints in a flight plan, the cursor must be activated.

Click the CENTER of the GPS Inner Rotary to activate the cursor. The waypoint will be highlighted.

Inserting Waypoints



To insert a new waypoint into the flight plan:

- Activate the Cursor (see earlier in guide).
- Click the GPS Outer Rotary at the 3 O'clock position or 9 O'clock position to position the cursor at the desired line in the flight plan (noting that the new waypoint will be inserted prior to this line).

IDENT, FACILITY & CITY US NORTHWEST EDIZ HOOK (PORT ANGE Click Click

IDENT, FACILITY & CITY

KSF<mark>O</mark>____US_SOUTHWEST San Francisco Intl

X-PLANE 430	- Tellerin				
	COM 2	ACTIVE	FLIGHT	PLAN	
	121.300	00 KLAX/k	(SFO	DTC	-D+ MENU
	122.790	-KLAX	296°	0.7	
	113.60	KSFO	306°	293	
COM/H OC	115.10			•_	DEFAULT GPS
E Constanting	ENR			<u> </u>	Elenning a
PUSH C/V	YLOC	M	SG FPL	0	CRSR
· · · · ·	CDI	OBS MS	G FPL	PROC	

- Click the GPS Inner Rotary at the 3 O'clock position to highlight the first character of the new waypoint identifier.
- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to set each character in the waypoint identifier as required.
- Click the GPS Outer Rotary at the 3 O'clock and 9 O'clock position to move to the next, or previous character in the waypoint identifier.

• Click the ENT (Enter) button twice to save the waypoint.

Deleting Waypoints





To delete a waypoint from the flight plan:

- Activate the Cursor (see earlier in guide).
- Click the GPS Outer Rotary at the 3 O'clock or 9 O'clock position to select the desired waypoint.
- Click the CLR Button to invoke the 'Remove Waypoint' Page.
- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to toggle between 'Yes' and 'No'.
- Click the ENT (Enter) Button to complete the operation.

Selecting a Standard Instrument Departure (SID)

[From Wikipedia] A SID is an air traffic control coded departure procedure that has been established at certain airports to simplify clearance delivery procedures.

Although a SID will keep aircraft away from terrain, it is optimized for air traffic control route of flight and will not always provide the lowest climb gradient. It strikes a balance between terrain and obstacle avoidance, noise abatement (if necessary), and airspace management considerations.







- Activate the Cursor (see earlier in guide).
- Click the GPS Outer Rotary at the 3 O'clock or 9 O'clock position to select the departure airport.
- Click the PROC (Procedure)
 button.
- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to highlight the 'Select Departure' menu option.
- Click the ENT (Enter) Key.

•

- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to select the desired procedure.
- Click the ENT (Enter) Key.

X-PLANE 430			
	COM 2 121.300	APT KLAX	
	122.790		
	VLOC 2 113.60	RW24L RW24R RW24R	
COMVLOC	115.10	RW25L TRANS	DEFAULT GPS
PUSH	ENR	Load?	PUSH
	CDI	OBS MSG FPL PROC	CHSH







- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to select the departure runway.
- Click the ENT (Enter) Key.

- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to select the desired transition waypoint.
- Click the ENT (Enter) Key.

- A graphical representation of the chosen departure procedure is displayed.
- Click the ENT (Enter) Key to load the procedure into the flight plan.

• The chosen departure procedure is now converted to the individual waypoints it comprises. These appear in the appropriate order at the start of your flight plan.

Selecting a Standard Terminal Arrival (STAR)

[From Wikipedia] A Standard Terminal Arrival (STAR) is a flight route defined and published by the air navigation service provider that usually covers the phase of a flight that lies between the last point of the route filled in the flight plan and the first point of the approach to the airport, normally the initial approach fix (IAF). Hence, a STAR connects the en-route phase with the approach phase of the flight.

X-PLANE 430					
Ç Ç	COM 2	ACTIVE	FLIGHT	PLAN	
VOL PUSH	121.300		SFO	DTC	-D+ MENU
	122.790	IKAYE	341°	10.2	
	113.60	SCHOR	288°	20.0	
Соминос	115.10	RZS	287°	23.7	DEFAULT GPS
Forman PLOC	ENR	KSFO	313°	225	Correged .
PUSH C/V	VLOC	M	G FPL		PUSH
· · · ·	CDI	OBS M	SG FPL	. PROC	

- Activate the Cursor (see earlier in guide).
- Click the GPS Outer Rotary at the 3 O'clock or 9 O'clock position to select the arrival airport.





- Click the PROC (Procedure)
 button.
- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to highlight the 'Select Arrival' menu option.
- Click the ENT (Enter) Key.
- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to select the desired procedure.
- Click the ENT (Enter) Key.

X-PLANE 430			
C C +	COM 2	APT KSF0	
	122.790		-D+ MENU
VOL/MEN	VLOC 2		CLR ENT
t	113.60 115.10		DEFAULT GPS
/VLOC	ENR	RW19B	Elenning ?
PUSH C/V	VLOC	MSG WPT COOL	PUSH CRSR
0	CDI	OBS MSG FPL PROC	







• Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to select the desired transition waypoint.

Click the ENT (Enter) Key.

- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to select the arrival runway.
- Click the ENT (Enter) Key.

- A graphical representation of the chosen departure procedure is displayed.
- Click the ENT (Enter) Key to load the procedure into the flight plan.

 The chosen arrival procedure is now converted to the individual waypoints it comprises. These appear in the appropriate order at the end of your flight plan.

Selecting an Approach

[From Wikipedia] An instrument approach, or instrument approach procedure (IAP), is a series of predetermined maneuvers for the orderly transfer of an aircraft under instrument flight conditions from the beginning of the initial approach to a landing or to a point from which a landing may be made visually.

X-PLANE 430 C VOL riso VOL riso VOL riso C VOL riso C VOL riso C VOL riso C VOL riso C VOL riso VOL riso C VOL riso VOL riso VO	COM 2 121.300 122.790 VLOC 2 113.60 115.10 ENR	ACTIVE	FLIGHT PLAN SF0 DTK DIS 269° 10.0 269° 13.0 269° 11.4 194° 16.5	✓ RNG △ → → MENU CLR ENT DEFAULT GPS AV PUSH
PUSH C/V	VLOC		SG FPL SG FPL PRO	PUSH





- Activate the Cursor (see earlier in guide).
- Click the GPS Outer Rotary at the 3 O'clock or 9 O'clock position to select the arrival airport.
- Click the PROC (Procedure) button.
- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to highlight the 'Select Approach' menu option.
- Click the ENT (Enter) Key.
- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to select the desired approach procedure.
- Click the ENT (Enter) Key.

X-PLANE 430			
	COM 2	APT KSFO	
	122.790	ILS28R	-D+ MENU
	VLOC 2	VECTORS TRANS	CLR ENT
COMVLOC	115.10	DUMBAIAF VECTOR	DEFAULT GPS
PUSH	ENR	Activate?	PUSH
C/V	VLOC	MSG WPT DDD DD	CRSR
Manager O	CDI	OBS MSG FPL PROC	No. Contraction



X-PLANE 430			
C C	COM 2	ACTIVE FLIGHT PLAN	
	122.790	WAYPOINT DTK DIS	-D+ MENU
V V	VLOC 2	KSF0 194° 16.5	CLR ENT
	113.60	Approach 128R ABCHT 094° 25.0	DEFAULT GPS
VLOC	ENR	ZILED 261° 3.9	NAV
PUSH	VL OC		PUSH
	CDI	OBS MSG FPL PRO	

 Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to select the desired initial approach fix (IAF). You may select VECTORS in place of an IAF, if ATC is providing these.

Click the ENT (Enter) Key.

- A graphical representation of the chosen departure procedure is displayed.
 - Click the ENT (Enter) Key to load the procedure into the flight plan.

• The chosen approach procedure is displayed in your flight plan, immediately after the destination airport.

Direct To (a waypoint)

At any time during the execution of a Flight Plan, the pilot may elect to proceed directly to a given waypoint. The chosen waypoint need not be in the existing Flight Plan (although it can be), and hence 'Direct To' differs from 'Activate Leg' (see next page).



From the Active Flight Plan Page, or any of the 'Nearest' Pages:

- Activate the Cursor (see earlier in guide).
- Click the GPS Outer Rotary at the 3 O'clock or 9 O'clock position to select the desired waypoint.
- Click the "Direct To" button.
- Click ENT (Enter) to activate.

Activating a Leg

Use the "Activate Leg" menu option to resume navigation at a specific leg (waypoint to waypoint) within your flight plan, bypassing previous legs.

X-PLANE 430					
C C	COM 2	ACTIVE	FLIGHT	PLAN	
VOL/PUEH	121.300	00 KLAX/KS	SFO		
	122.790	WAYPOINT	DTK	DIS	
		RZS	287°	23.7	
	113.60	INYOE	000°	208	
COM/	115.10	DYAMD	248°	78.6	DEFAULT GPS
VLOC	ENR	LAANE	248°	16.5	a formation
PUSH	111.00			п	PUSH
C/V J	VLUC	MS	DIFPL I	u	CRSR
0	CDI	OBS MS	G FPL	PROC	

X-PLANE 430	COM 2 121.300 <u>122.790</u> VLOC 2 113.60	ACTIVE FLIGHT PLAN PAGE MENU Activate Leg? Save Flight Plan? Invert Flight Plan?	RNG A -B+ MENU CLR ENT DEFAILT 200
PUSH	L15.10 ENR VLOC CDI	Delete Flight Plan? MSG FPL OBS MSG FPL PROC	PUSH CRSR

From the Active Flight Plan Page:

- Activate the Cursor (see earlier in guide).
- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to highlight the waypoint that represents the <u>conclusion</u> of the desired leg.
- Click the MENU Key.
- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to highlight the 'Activate Leg' menu option.
- Click the ENT (Enter) Key.
- The X430 will navigate to the first waypoint in the chosen leg, and then (once reached) to the second waypoint in the chosen leg. The flight plan will then continue from that point.

Activating an Approach

Use the "Activate Approach" menu option once ATC clears you for an instrument approach via a transition or an initial approach fix. This will switch from en-route (ENR) or terminal (TERM) navigation to approach (APR) navigation. Flight plan navigation is canceled, and approach navigation is activated. Instead of flying to the center of the airport from an arbitrary direction, the GPS will now guide you according to the (previously) selected approach procedure.

X-PLANE 430			
	COM 2 121.300	ACTIVE FLIGHT PLAN	
	122.790	WAYPOINT DTK DIS	
	VLOC 2 113.60	BERKS 269° 11.4	CLR ENT
COM/VLOC	115.10 ENR	<mark>KSFO</mark> 194° 16.5 Approach I28R	DEFÀULT GPS
PUSH C/V	VL0C	MSG FPL	PUSH CRSR
Name O	CDI	OBS MSG FPL PROC	



- From the Active Flight Plan Page:
 - Click the PROC (Procedure) button to invoke the Procedures menu.
 - Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to highlight the 'Activate Approach' menu option.
 - Click the ENT (Enter) Key.
 - The X430 will commence the approach, by navigating (first) to the initial approach fix for the chosen procedure.

Activating Vectors to Final

Use the "Activate Vectors to Final" menu option when you are vectored to the approach by ATC. When you select this, the GPS removes all approach transitions and instead shows you an extended line-up for the final approach course to the final approach fix (FAF) for the selected approach procedure.

X-PLANE 430 C VOLINE VOLINE C VOLINE VOLINE C VOLINE VOLINE VOLINE	COM 2 121.300 122.790 VLOC 2 113.60 115.10 ENR	ACTIVE FLIGHT PLAN 00 KLAX/KSFO MAYPOINT DTK DIS COGGR 269° 13.0 BERKS 269° 11.4 KSFO 194° 16.5 Approach I28R	PUSH
C/V	VLOC	MSG FPL	CRSR
0	CDI	OBS MSG FPL PROC	and a second

From the Active Flight Plan Page:

 Click the PROC (Procedure) button to invoke the Procedures menu.

X-PLANE 430			
Ç Ç	COM 2	PROCEDURES	
VOL/PUBH	121.300	Activate Vector-To-Final?	-D+ MENU
· · · · · · · · · · · · · · · · · · ·	122.790	Activate Approach?	
VOL/PURH Y	VLOC 2	Select Approach?	CLR ENT
	113.60	Select Arrival	
COMVLOC	115.10	Select Departure?	NAV GPS
Elenson .	ENR		Elenned 2
C/V	VLOC		CRSR
and a state of the	CDI	OBS MSG FPL PROC	

- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to highlight the 'Activate Vector-To-Final' menu option.
- Click the ENT (Enter) Key.
- The pilot is now in control of the navigation, under instructions from ATC. The X430 will display an extended localizer for the pilot to intercept.

Loading a (saved) Flight Plan

Flight plans that have been generated previously by your chosen provider (and saved in the appropriate format for X-Plane) may be loaded into the X430 (replacing the currently active flight plan). The following file (extension) types are acceptable:

- FMS (compatible from X-Plane 9 and up, contains only waypoints)
- FLP (compatible with aircraft for both X-Plane and other simulators, supports airways)
- FML (X-Plane internal format, for saving your own flight plans)





- Click and <u>HOLD</u> the CLR
 button
- Click the FPL button.
- Click the GPS Inner Rotary at the 3 O'clock position to invoke the Flight Plan Catalog Page.
- Activate the Cursor (see earlier in guide).
- Click the GPS Inner Rotary at the 3 O'clock and 9 O'clock positions to select the desired flight plan.
- Click the ENT (Enter) Key.

The OBS Function

Important

The OBS function is used in conjunction with your aircraft's VOR/ILS receiver. The X430 unit must be assigned to the same NAV designator (NAV1, NAV2, etc.) as used by the companion VOR/ILS receiver.

The Omni Bearing Selector (OBS) button provides the pilot with the capability to fly to, or from, any waypoint or fix via a chosen bearing.

Let's assume we are starting from KLAX, and the next waypoint in the Flight Plan is KTOA. Due to circumstances during the flight, the pilot wishes to approach KTOA on a bearing of North (360 degrees).



- A direct course from KLAX to KTOA would look like this.
- The pilot would approach KTOA on a bearing of approximately 130 degrees, and this is not the desired outcome.



Using the OBS Rotary associated with the VOR/ILS Receiver on the instrument panel:

• Select the desired bearing, which, in this example, is 360 degrees



- Click the OBS Button to place the X430 in OBS mode.
- The X430 now displays a new course to KTOA. The magenta line represents the TO course (360 degrees) and the white line represents the FROM course (360 degrees).
- To approach KTOA on a bearing of 360 degrees, the pilot would intercept the magenta line, and follow it to KTOA.

SUSPEND (SUSP) Mode

"Suspend" mode is invoked by the X430 when there is a requirement to delay the automatic sequencing to the next leg of the flight plan.

When OBS mode is active:

• The pilot may fly beyond the target waypoint, and then follow a radial FROM that point. When the aircraft crosses the waypoint, the X430 will automatically invoke "Suspend" mode, allowing the pilot to continue flying the FROM radial, until he makes the decision to sequence to the next leg of the Flight Plan (by clicking the OBS button).

When OBS Mode is inactive:

- "Suspend" mode becomes active when a Flight Plan contains a "Hold", and the aircraft enters that portion of the route. The X430 will continue to fly the hold without sequencing to the next leg until instructed by the pilot (by clicking the OBS button).
- "Suspend" mode becomes active when executing a published approach procedure, and a missed approach decision is
 required. The X430 cannot make this decision for the pilot, because it is dependent on the visibility conditions, and
 therefore invokes "Suspend" mode. If the pilot makes the decision to continue with the approach, the X430 remains in
 "Suspend" mode, and continues to fly the procedure to a landing. If the pilot initiates a missed-approach, he must click
 the "OBS" button, to deactivate "Suspend" mode, at which time the X430 will sequence to the first leg of the missed
 approach.



X430 in "Suspend" Mode.

Messages

The X430 features a 'MSG' annunciator at the bottom of the display panel to alert the pilot to information that is pertinent to the flight. Most messages are advisory in nature, but some may require pilot intervention.



If the MSG annunciator is displayed:

Click the MSG (Message)
 button to invoke the Messages
 Page.

Autopilot Operations

Important

If the X430 is not the primary GPS unit in your aircraft, it may not be possible to couple this unit to the autopilot.

In suitably equipped aircraft, the Autopilot may be coupled to the X430, to automatically steer according to a programmed flight plan. Autopilot operations differ from aircraft to aircraft, and so the example here is generic, and cannot be guaranteed to apply to your specific situation.

